



Blue Sky Network

PLEASE READ BEFORE DEPLOYMENT



SKYLINK

QUICK START GUIDE

 **Mackay**

Marine Electronics &
Satellite Communications

www.mackaymarine.com

SKYLINK DUAL-MODE DATA GATEWAY

Top Panel:



Bottom Panel:



- | | |
|-------------------------------|----------------------|
| 1. Iridium antenna connector | 4. Cellular antenna |
| 2. Power LED light | 5. Power port |
| 3. Cellular antenna connector | 6. Connectivity port |

HARDWARE SETUP

STEP 1: INSTALL THE SIM CARDS

NOTE: If you purchased the Dual-Mode Data Gateway directly from Blue Sky Network, it will arrive with the cellular and Iridium® SIM cards already installed.

Obtain an Iridium SIM card and a cellular SIM card. Un-screw the two Phillips screws that secure the entire bottom panel and carefully remove the panel.

Insert the cellular SIM card in the slot behind the connectivity port, taking care not to damage the cable wires. Then, flip the device and insert the Iridium SIM card into the slot. Re-attach the bottom panel and tighten the screws, taking care not to damage the cable wires.



Cellular SIM slot



Flip terminal for Iridium SIM slot

STEP 2: ATTACH THE ANTENNAS

Screw the cellular antenna to the cellular antenna connector on the Data Gateway. Screw the Iridium antenna, or the Iridium antenna cable connector, to the Iridium antenna connector on the Data Gateway. The Blue Sky Network Iridium antenna may be one of four antennas:

1. Direct connection MARUWA black plastic antenna (MHL-1621C)
2. High-profile white Maxtena conical antenna with cable (M1621HCT-HP)
3. High-profile white SCAN conical antenna with cable (65020-000)
4. Direct connection Sensor Systems white plastic antenna (S67-1575-414)

STEP 3: CONNECT THE POWER

Connect one end of the power cable to the power port on the Data Gateway and connect the other end to a power source. The power cable may be any of these options:

1. 12VDC cigarette lighter adapter
2. 12VDC power cable with pigtail
3. POE injector (self-assembly kit included)
4. AC/DC power adapter (self-assembly kit included)

NOTE: There are two Ethernet ports on the POE injector adapter. Ensure you use the Data+Power port.

STEP 4: INSTALL THE DEVICE

NOTE: Personnel should maintain a safe distance of 30cm. (11.8 in.) minimum from the antenna while the terminal is operating to avoid exposure.

To ensure proper terminal and antenna functioning, securely fasten the unit to a rigid object. Mount the antenna with an unobstructed, clear view of the sky, as far away from other antennas as possible, and in an area that prevents exposure to its radiation.

See the **SkyLink Installation Guide** for more antenna and device requirements

IMPORTANT!

Ensure SkyLink is installed with the satellite antenna pointing skyward and a maximum of 8.2° obstruction from ground-based obstacles, especially on the North/South axis.



SOFTWARE SETUP

STEP 1: ACTIVATE SERVICE


If you are using Blue Sky Network SIM cards, navigate to <https://blueskynetwork.com/contact/activate-service> and submit an activation request. If you are not using Blue Sky Network SIM cards, contact your reseller.

STEP 2: CONNECT TO THE DATA GATEWAY

A label on the box and the back of the device shows the Wi-Fi QR code, SSID, and password. If using a smart device, connect to the Data Gateway Wi-Fi by scanning the QR code. Alternatively, connect using the Wi-Fi SSID and password.

Open a web browser and type 192.168.111.1 into the address bar, then press enter. The SkyLink Device Interface (DI) will appear.

Default username and password: admin

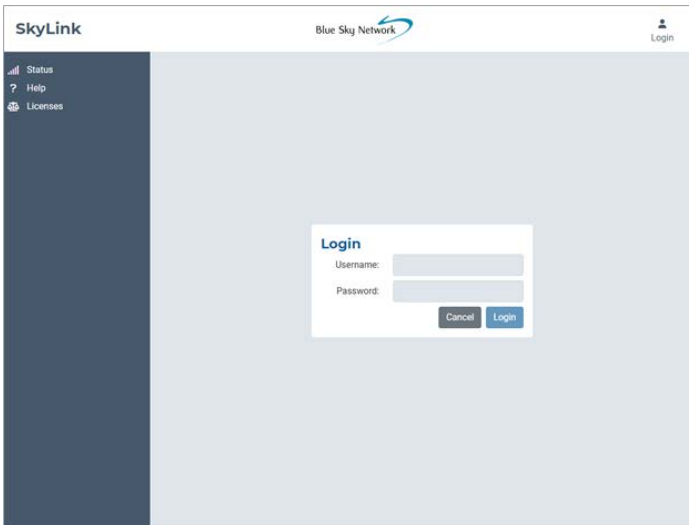

STEP 3: ENABLE BASIC SETTINGS

In the SkyLink DI, navigate to the following screens to make these standard device configurations. Remember to press 'Save' on each screen after making changes.

Status

- System Information > Location > Ensure device shows an accurate GPS location
- Satellite > Ensure device has signal
- Cellular > Ensure device has signal

Connection Manager

- Connection Manager > Unrestricted, or set to preference
- Internet Data Routing > Data Routing: Cellular then Satellite

General Settings

- Satellite > Satellite Enabled: ON
- Satellite > Data Enabled: ON
- Cellular > Enter GSM SIM APN setting for your network provider

The screenshot displays the SkyLink configuration interface. At the top, it shows the SkyLink logo and the Blue Sky Network logo. The interface is divided into several sections:

- SkyLink:** Includes fields for Asset Tag (Test 12345) and Max Daily Usage (with a unit of bytes). A Change Password button is visible.
- Satellite:** Features two toggle switches: Satellite Enabled (ON) and Data Enabled (ON).
- WiFi:** Includes a toggle switch (ON) and fields for SSID (Dragonsinc), Mode (5 GHz), Country (USA), Channel (Auto), Security (WPA2-PSK), and Password (masked). A QR code is displayed with the text "Scan to Connect" below it.
- Cellular:** Includes a toggle switch (ON) and fields for APN (em), Username (Optional), Password (Optional), IMEI (861364040178400), SIM (89883030000052347330), and Network (AT&T).

At the bottom of the interface, there are buttons for Reboot, Cancel, and Save.

After configuring the above settings on each screen, press 'Save' and then 'Reboot' on the General Settings screen to apply the changes. Please refer to the **SkyLink User Guide** for a comprehensive list of the configurations that can be made on each screen as well as device capabilities.

STEP 4: CONNECT TO THE ONLINE PORTAL

To remotely manage a fleet of devices, use the SkyLink Online Portal. In a web browser type <https://portal.skylink.net/login> into the address bar, press enter, then sign in to your account.

NOTE: Resellers will receive their login information from their account manager. Customers will receive it from the Blue Sky Network operations team.

Basic Settings & Configurations

Click the wheel icon in the top right of the screen to view and update your account settings. Navigate to the **My Org** screen to edit your organization's contact info and see details about your parent org.

Use the **Devices** screen to apply device and voice profiles and assign a unit to an organization. Select the device(s), make the desired configurations, then press 'Ok' or 'Assign' to apply the changes.

Manage users throughout the system, including their contact info, on the **Users** screen. When creating a new user, they will receive an email to change their password. They will then be sent a verification ID to finish account setup.

The **Profiles** screen allows you to create device and voice profiles that can be saved as configuration templates and applied to groups of terminals. Click 'New' and complete all mandatory fields to add a General Settings, Network, Firewall, Remote Management, or Accessories profile, or to configure a SIP or POTS extension.

See the **SkyLink Cloud Services Guide** for more information on Portal capabilities.



SkyLink User, Installation, and Cloud Services Guides can be viewed and downloaded from this location:

<https://support.blueskynetwork.com/download-resources>



Questions? Contact us at support@blueskynetwork.com
+ 1 858-551-3894



Blue Sky Network



Mackay

**Marine Electronics &
Satellite Communications**

www.mackaymarine.com

Mackay Marine, Global Commercial Sales

+1 281 479 1515 marinesales@mackaymarine.com

Mackay Communications, Satellite Solutions

+1 919 850 3100 satserv@mackaycomm.com

Mackay Marine Canada

+1 902 469 8480 sales.canada@mackaymarine.com

Anytime. Anywhere.

www.blueskynetwork.com

SKYLINK-QUICK-START-GUIDE-V3.0

For customer use only. Not intended for further distribution.